



Chœur de pierres

NOTICE DE FIN DE VIE

Pieds de luminaires en pierre électrifiés

Références :

Le fleuron · Le pinacle · La clé de voûte

La flèche · La corniche · La balustrade




Le symbole  signifie qu'il ne faut pas jeter ce luminaire dans une poubelle « ménagère ». Il comprend des composants qui peuvent être nocifs pour l'environnement et la santé. Ce luminaire contient également des composants qui peuvent être réutilisés ou qui sont recyclables. Veuillez consulter les informations de votre commune concernant le ramassage des déchets électriques. Si ce luminaire comprend une ampoule ne la mettez pas non plus à la poubelle, veuillez la retourner à votre point de vente ou un centre de ramassage approprié.

Démontage du luminaire

Toute opération de démontage doit être réalisée hors tension, après avoir débranché le luminaire du réseau électrique.

- Retirer les bagues de la douille.
- Dévisser la partie supérieure de la douille tout en appuyant sur la languette à l'aide d'un tournevis (voir illustration ci-dessous).

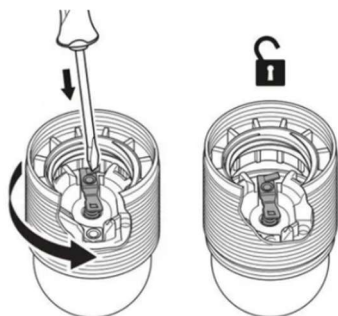



Chœur de pierres

- Extraire délicatement la partie centrale de la douille afin d'accéder aux conducteurs électriques.



- Dévisser les vis de maintien des conducteurs à l'aide d'un petit tournevis.
- Dévisser le culot de la douille à la main.
- Dévisser la chandelle (réhausse) à la main.



- Dévisser l'extensible à l'aide d'un tournevis plat.



- Tirer légèrement le câble vers le haut afin de faire apparaître l'arrêt de traction, puis le dévisser à la main.
- Retirer le câble du pied en pierre.
- Retirer le passe-fil situé à la sortie du câble.



Chœur de pierres

END-OF-LIFE INSTRUCTIONS

Electrified stone lamp bases

References :

Le fleuron · Le pinacle · La clé de voûte

La flèche · La corniche · La balustrade




The symbol  indicates that this luminaire must not be disposed of with household waste. It contains components that may be harmful to the environment and human health. It also contains components that can be reused or recycled. Please consult your local waste collection authority for information regarding the disposal of electrical equipment. If this luminaire is fitted with a light bulb, do not dispose of the bulb with household waste either. Please return it to your retailer or to an appropriate collection point.

Disassembly of the Luminaire

Any disassembly operation must be carried out with the luminaire disconnected from the power supply.

- Remove the socket retaining rings.
- Unscrew the upper part of the lamp holder while pressing the release tab with a screwdriver (see illustration below).

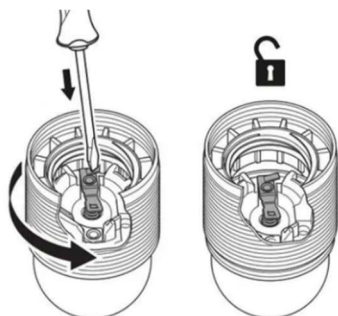



Chœur de pierres

- Carefully remove the central part of the lamp holder to gain access to the electrical conductors.



- Loosen the conductor retaining screws using a small screwdriver.
- Unscrew the socket base by hand.
- Unscrew the candle tube (spacer) by hand.



- Unscrew the threaded nipple using a flat-head screwdriver.



- Gently pull the cable upwards until the strain relief becomes visible, then unscrew it by hand.
- Remove the cable from the stone lamp base.
- Remove the cable grommet located at the cable outlet.